

## CASEMENT COUPLING DEVICE MANUAL FUNCTIONS

Picture 1. When opening the ventilation window the casement coupling device limits the opening angle of the window on app.100mm based on the safe use of the window. Window can be closed from this position normally.

Picture 2. To open the casement coupling pull the locking bar out to release the connecting screw and the casements will be separated.

Picture 3. When reconnecting the casements guide the head of the connecting screw in the slide and push the locking bar in.

Picture 4. Ventilation.

